

MECHANICAL BREAKDOWN PROTECTION

WHAT ARE MY OPTIONS?

With a full complement of affordable coverage options, ASG's protection is the ideal solution to protect your investment and reduce out-of-pocket expenses should a mechanical breakdown occur.

PROTECTION FROM THE UNEXPECTED

Your vehicle is not only an investment; it's your transportation lifeline. With ASG's protection plan, you have the peace of mind knowing your investment is protected.

	Platinum +	Gold	Silver	Copper
Hardware	◆	◆		
Audio Center	◆	◆		
Fuel	◆	◆	◆	
Suspension	◆	◆	◆	
Steering	◆	◆	◆	
Air-Conditioning	◆	◆	◆	
Electrical	◆	◆	◆	
Brakes	◆	◆	◆	
Drive Axle	◆	◆	◆	
Transmission / Transfer Case	◆	◆	◆	
Engine	◆	◆	◆	

GET THE MOST OUT OF YOUR COVERAGE

With four levels of coverage, ASG's protection offers affordable options to ensure your vehicle is protected against costly mechanical and electrical repairs.

COVERAGE BENEFITS*

Roadside Assistance

All of our plans provide reimbursement for Roadside Assistance. The emergency services include:

- Lock-Out Assistance
- Fuel Delivery Services
- Flat Tire Assistance
- Battery Service

Rental Vehicle Assistance

In the event of a covered mechanical breakdown, you will be eligible for alternate transportation expenses according to the schedule in your contract.

Tire Road Hazard

ASG's protection plans provide coverage for the repair, or if necessary, the replacement of your vehicle's tires if damaged due to a road hazard.


Trip Interruption

In case of a mechanical breakdown that occurs more than 100-miles away from your home and results in a repair facility keeping your vehicle overnight, you are eligible to be reimbursed for meals and lodging for up to three days.

* This brochure highlights the benefits of ASG's protection plans. Please refer to the actual service contract for coverages, exclusions, terms and conditions

PROTECT YOUR VEHICLE

The vast majority of costly mechanical and electrical failures occur **AFTER** the factory warranty has expired. Avoid expensive repairs by protecting your vehicle with a Mechanical Breakdown Protection contract!

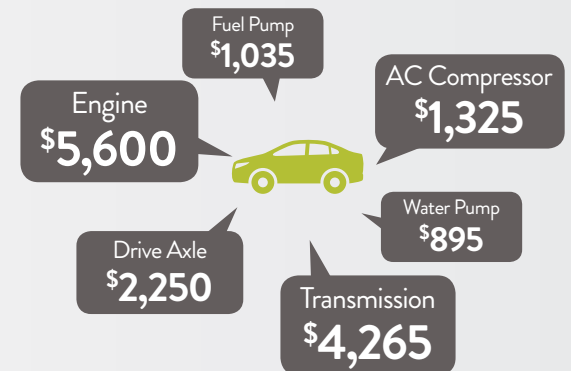

The above is for illustration purposes only.
Based on average repair and replacement costs.
Actual costs paid may vary.

GET MORE WITH PLATINUM

PLATINUM

GOLD

SILVER


COPPER

PERSONALIZE YOUR COVERAGE




PLATINUM Protection includes all components listed in Gold, Silver and Copper, extended coverage for virtually all of your vehicle's mechanical and electrical components


GOLD Protection includes all components listed in Silver and Copper, plus the following:


 **ENGINE:** Exhaust manifold · Radiator · Electric fan motor · Water pump housing · Belt tensioner · Engine thermostat · Hot water valve


 **TRANSMISSION AND TRANSFER CASE:** Electronic shift control: processor, sensor · Four wheel drive actuator


 **DRIVE AXLE:** Differential Cover


 **STEERING:** Dampener · Tie rods · Tie rod ends · Steering wheel · Tilt wheel mechanism · Rear wheel steering: control valve and sensor, control unit, shaft and couplings, power cylinder(s), oil pump, stepper motor, rack assembly


 **BRAKE:** Combination valve · Accumulator · ABS: booster pump, control processor, control sensors, control solenoids, modulator valve, valve and accumulator · Brake calipers · Wheel cylinders


 **SUSPENSION:** Radius arm and bushing · Stabilizer bar, links and bushings · Strut bearings and bushings · Air suspension compressor · Suspension control computer · Suspension control solenoids · Height sensor · Mode selector switch

 **ELECTRICAL:** Electronic fuel injection: sensors, control units · Electronic spark timing control unit · Igniter · Power antenna motor · Rear window: defogger unit, defrost grid · Electric power seat motor · Electric convertible top motor · Electric sunroof motor · Electric headlamp motor · Electronic instrument panel: control module, display · Engine wiring harness · Electronic traction control sensors and control module · Electronic suspension air compressor · Factory installed theft alarm system · Factory installed remote keyless entry transmitter/receiver · Inclinator · Illuminated vanity mirrors · Trip/mileage computer


 **FUEL SYSTEM:** Fuel injection pump · Diesel fuel injectors · Gasoline fuel injectors (for electrical failure only) · Vacuum pump


 **AIR CONDITIONING:** Pressure switches · Automatic temperature control selector head · Air ducts · Air registers · Control cables · Power module · Plenum doors · Vacuum motors · Heater core


 **AUDIO CENTER:** Factory installed entertainment chassis modules including: Radio · CD player · Magnetic tape player · Graphic equalizer (Limited repair only, not replacement)


 **HARDWARE:** Ashtrays · Door: latches, locks, hinges · Hood: latch release mechanism, struts, hinges, torsion bars · Ignition switch lock cylinder · Rear hatch struts · Seat tracks · Deck lid: latch/release, hinges, torsion bars · Power seat transmission · Window: crank handles, regulators · Wiper motor transmission · Altimeter · Compass · Glove box: lock, latch


SILVER Protection includes all components listed in Copper, plus the following:

 **ENGINE:** Engine oil pressure gauge · Radiator coolant recovery unit · Electric radiator fan motor relay/switch · Electric radiator fan motor sensor · Engine coolant temperature gauge · Timing belt


 **STEERING:** Gear housing/rack assembly and their internal components · Control valve and cylinder · Power cylinder assembly · Steering column shaft(s) and their couplings/bearings · Steering knuckle · Power steering pump, pulley, and mounting brackets · Pitman arm · Idler arm · Drag link · Steering column bearings

 **BRAKE:** Parking brake cable · Self adjusters · Brake lines & fittings

 **SUSPENSION:** Wheel bearings · Sway bar and its bushings and linkage · Upper and lower control arms · Control arm shafts and bushings · Upper and lower ball joints · Strut bar · Spindle and support


 **ELECTRICAL:** Ignition coil · Electronic ignition: module, distributor · Throttle position sensor · Fuel control temperature sensor · Idle control actuator · Manifold vacuum sensor · Crankshaft position sensor · Camshaft position sensor · Igniter · Volt/amp gauge · Wiper motors · Manually operated electrical switches · Horn and horn relay · Electric window motors · Electric mirror motors · Cruise control: module, actuator · Electric door lock: relay, actuator · Electric trunk/tailgate/hatchback actuators · Backup light switch · Brake light

switch · Door operated courtesy light switches · Neutral safety switch · Windshield washer pump · Cigarette lighter(s) · Auxiliary power point · Tachometer · Headlamp dimmer switch · Map lights · Clock

 **FUEL SYSTEM:** Fuel tank · Fuel pump · Accelerator pedal · Fuel pressure regulator · Fuel level sending unit · Accelerator pedal linkage · Fuel pressure sensor · Fuel pump relay · Fuel shutoff control · Fuel tank filler pipe · Metal fuel lines · Fuel gauge


 **AIR CONDITIONING:** Idler pulley and bearing · Manual temperature control selector head · Heater control valve · Idler pulley tensioner


COPPER Protection


 **ENGINE:** Cylinder block · Cylinder head(s) · Turbocharger/supercharger and their internal components · Timing gears: Timing/balance shaft chain, guides, tensioners, sprockets and cover (excluding timing belt) · Oil pan · Oil pump · Valve cover(s) · Wastegate · Radiator fan motor · Water pump and pulley · Fan clutch · Fan shroud


 **TRANSMISSION AND TRANSFER CASE:** Transmission and transaxle cases and their internal components · Torque converter · Vacuum modulator ·

Gear shift lever · Transmission shift linkage · Pan · Transfer case and its internal components

 **DRIVE AXLE:** Final drive and axle housings and their internal components · Axles · Axle shafts · Propeller shafts · Constant velocity joints · Universal joints · Yokes

 **BRAKE:** Master Cylinder · Power brake assist boosters · Backing plate assembly · Brake pedal assembly · Parking brake pedal · Parking brake release mechanism

 **ELECTRICAL:** Starter motor · Starter motor drive · Starter motor solenoid · Alternator · Voltage regulator · Alternator pulley and mounting bracket

 **AIR CONDITIONING:** Compressor · Accumulator/Drier only in conjunction with compressor replacement · Condenser · Evaporator · Compressor clutch and coil · Compressor pulley and mounting brackets · Expansion valve · Orifice tube · Blower motor